

075..ES  
071..ES  
070..  
071..  
075..  
071..120  
080..  
081..  
085..  
130..  
135..  
131..


**COMPATIBILITY:**

SY  
DE  
DU  
NT  
ND  
PI  
APM  
FA/GI



**1**


Montaggio  
Assembly

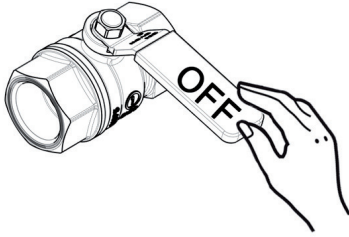


$65 \pm 5^\circ\text{C}$



$15 \pm 5^\circ\text{C}$


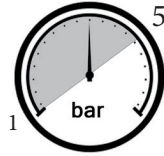


MIN - MAX

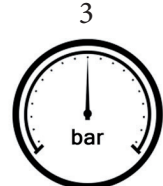


OK

Fissaggio Leve  
Fixing Levers

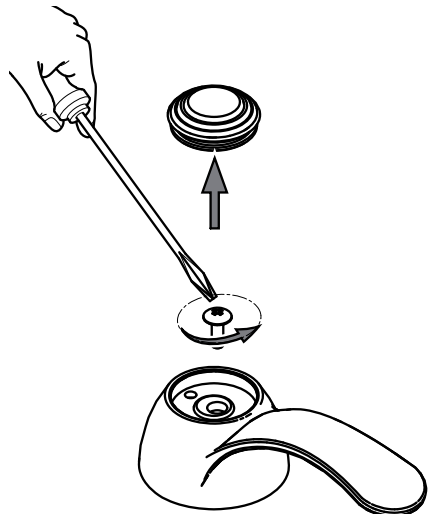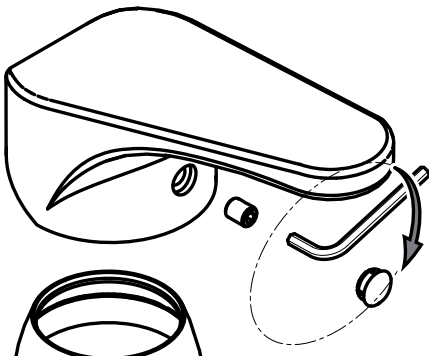


**2**  
**a**


075ES 071ES  
071 070 075  
131 130 135

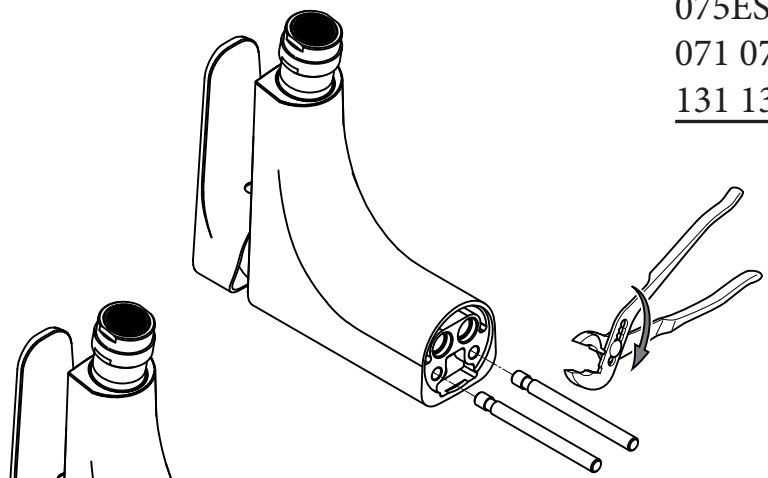

**b**

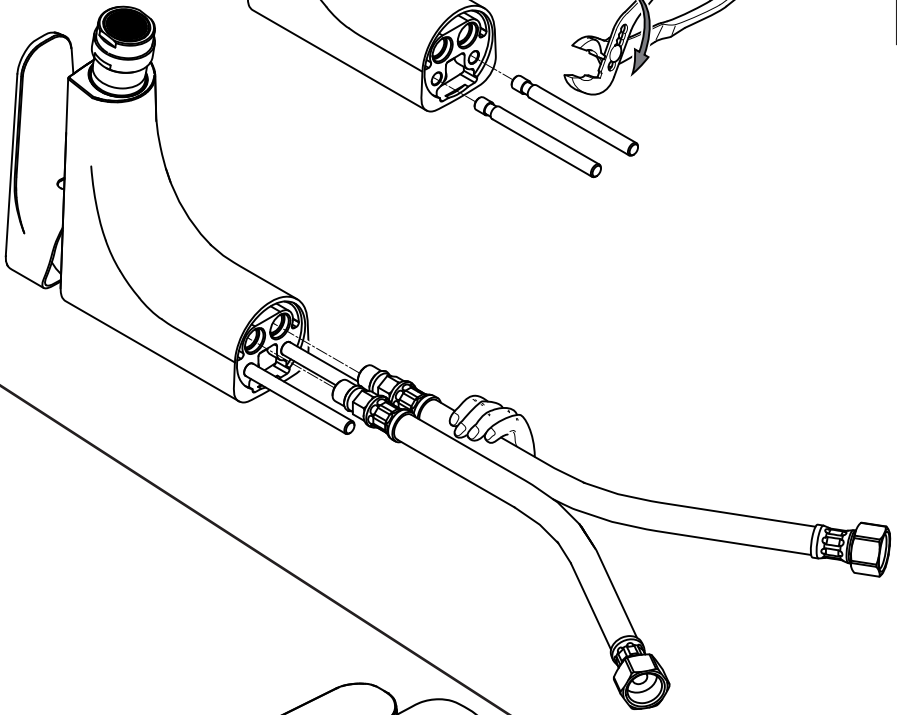


**c**

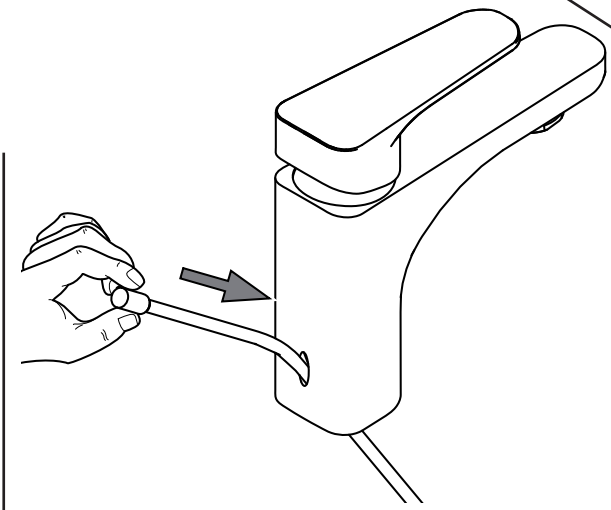


075ES  
070 075  
130 135


**C**

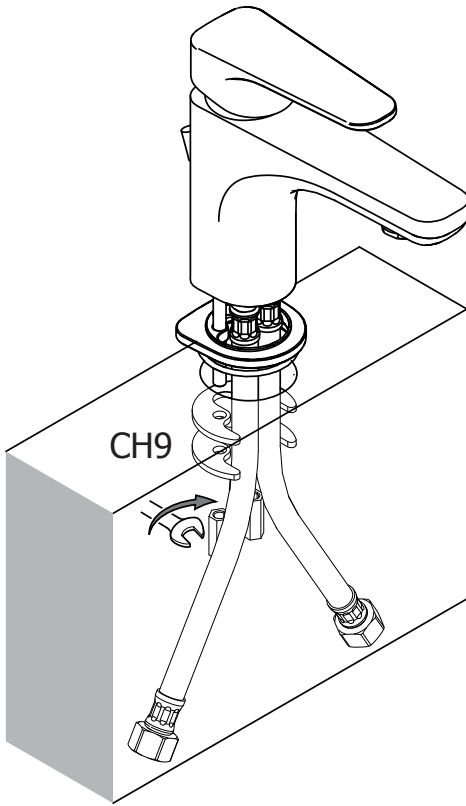


075ES 071ES  
071 070 075  
131 130 135  
080 081 085  
071..120

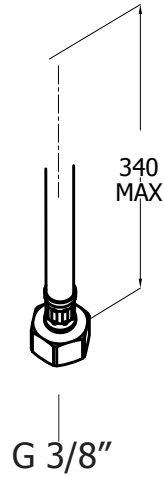

Serie:DE  
NT  
ND

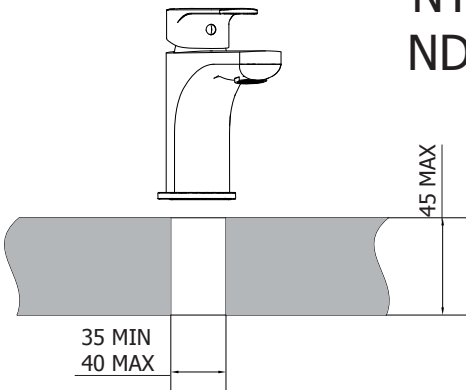


Serie:PI  
APM

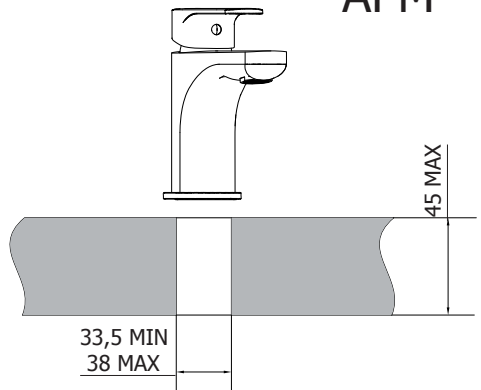


075ES  
070 075  
130 135  
080 085


d

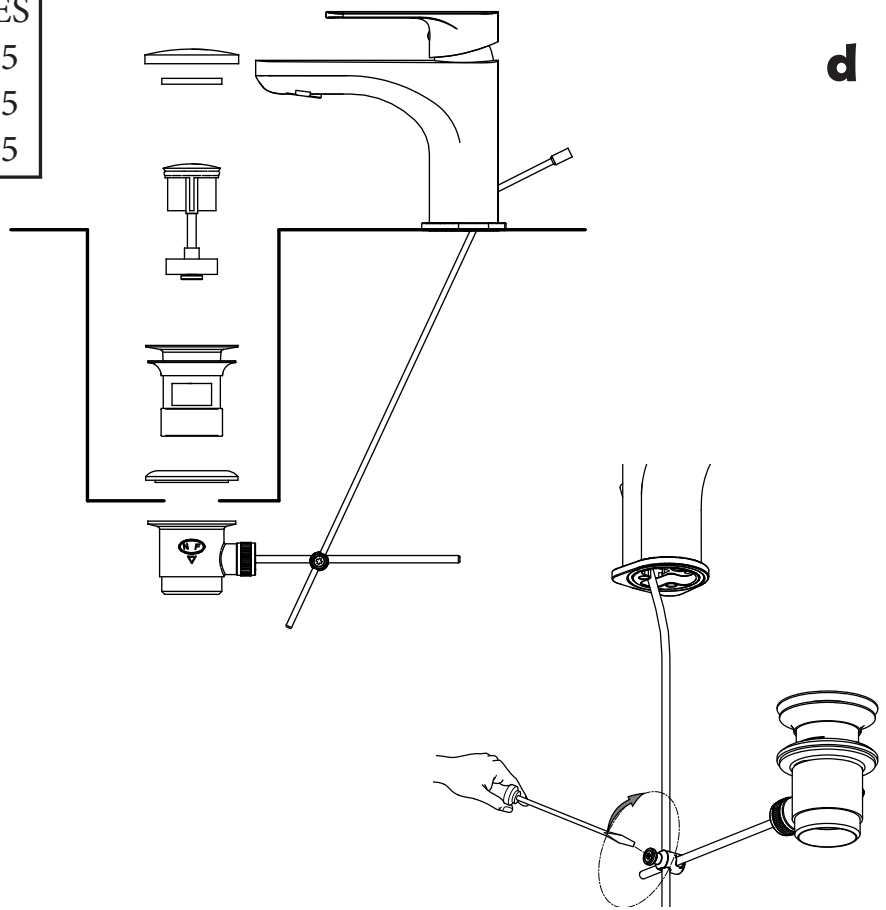

Serie:DU

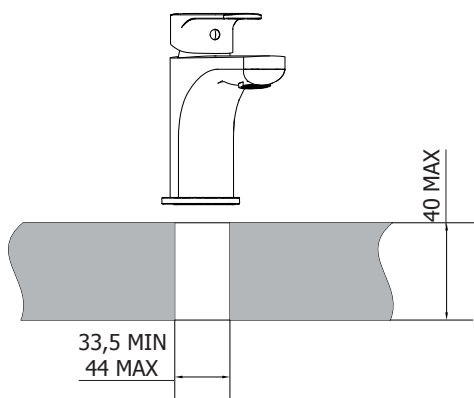




Serie:SY  
FA/GI

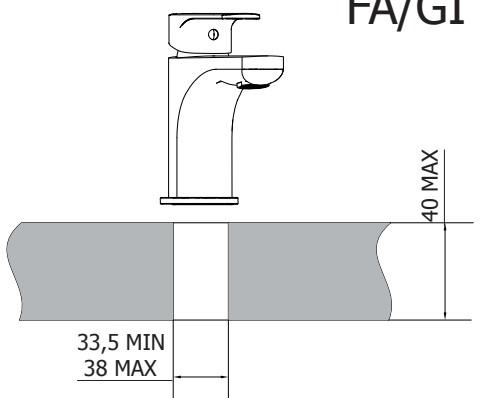

# F

Funzionamento  
Working





075 ES  
071 ES

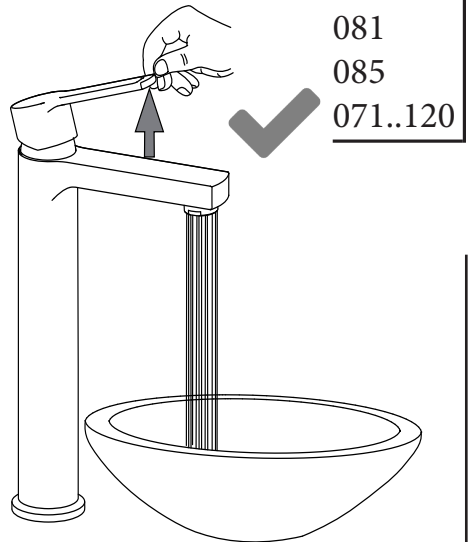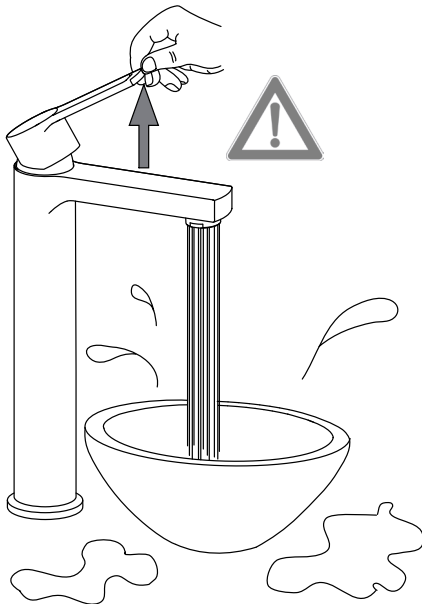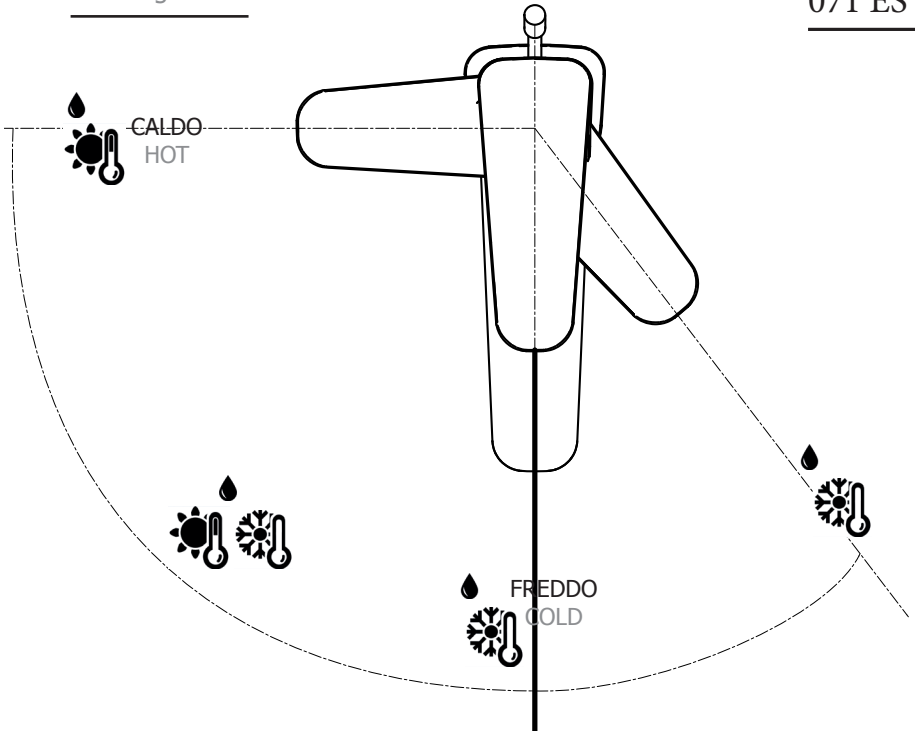

080  
081  
085  
071..120


# M

## Manutenzione Service

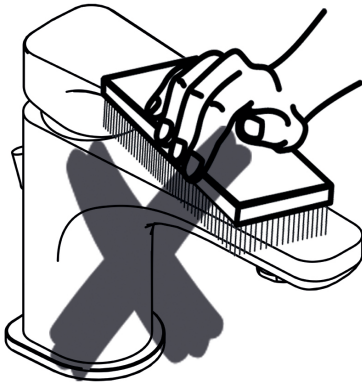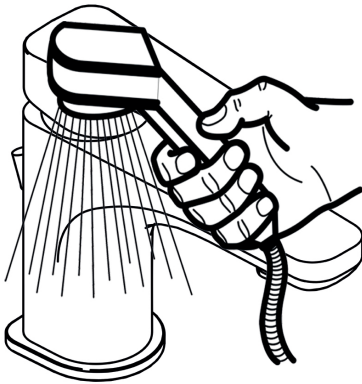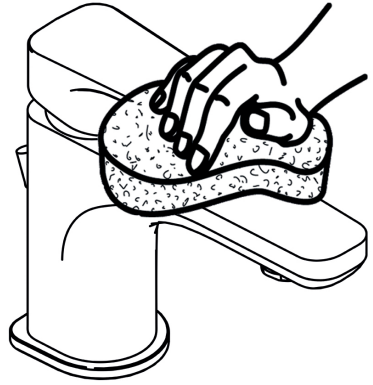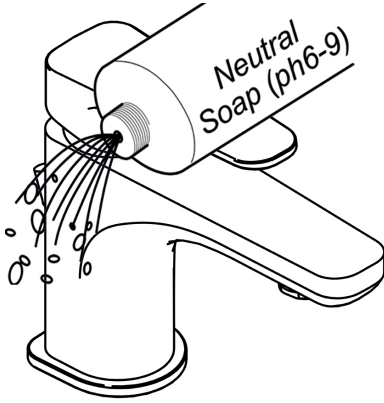


**S** Sostituzione Cartuccia  
How to replace Cartridge

075ES 071ES  
071 070 075  
081 080 085  
131 130 135

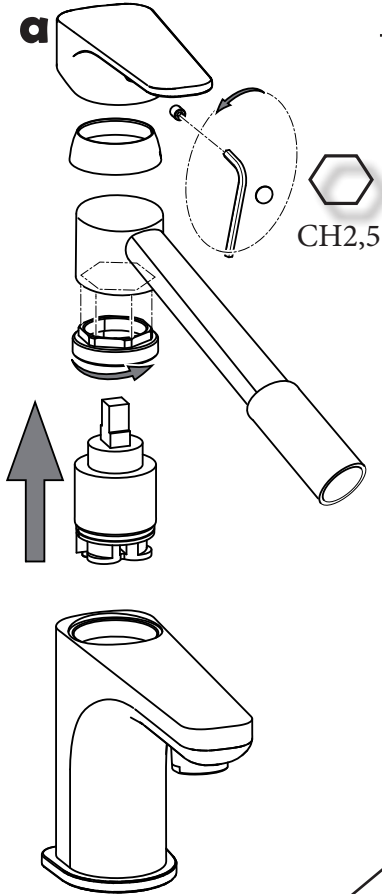

075ES 071ES  
071 070 075  
081 080 085  
131 130 135

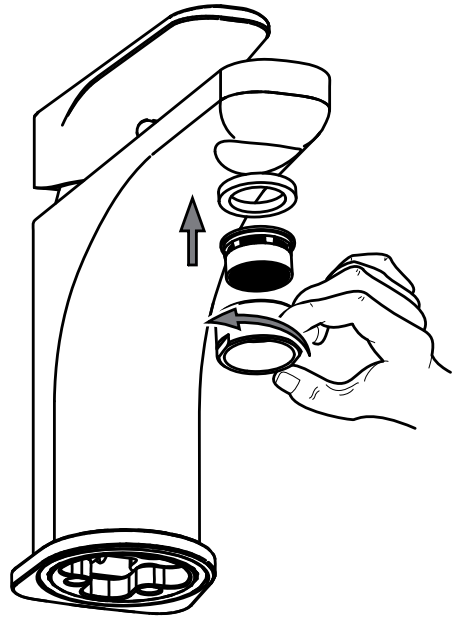

**b** Sostituzione Aeratore  
How to replace Aerator

**c** Sostituzione Snodo  
How to replace Joint

131 130 135

